



### A670 – We begin

## Contents

Mobile controls	3
Putting into operation	5
Switch on / off	7
Keypad lock	8
Charging	9
Making calls	11
Emergency call	13
Flashlight	15
Safety instructions	16
Used electric device	18
Battery liquidation	19

### Mobile controls



1	Right functional button	
2	Left functional button	
3	Navigation button	
	up / down	
4	Red button	
5	Green button	
6	Button 0	
7	Button #	
8	Button *	
9	Contacts for the stand	
10	MicroUSB connector	
11	Flashlight	
12	Earphone	
13	Flashlight switch	


### Putting into operation

### Insert of battery and SIM card:

- Slip your nail at the slot under the mobile cover in the bottom corner on the back side of the mobile phone and carefully pull down the cover.
- Insert SIM and also memory cards (if you have) at the positions marked SIM.

- Insert the battery. Three metal contacts must lead towards the bottom side of the mobile phone.
  Battery must click smoothly into the slots in the mobile phone.
- Put the battery cover back. Place the cover on the back side of the mobile phone and press gently around the circuit untill the cover clicks properly on its place.

## Switch on / off

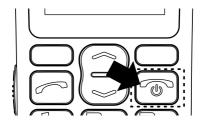

**To Switch On -** press and hold the **RED** button (4) till the mobile turns on.

(Now you can be asked to enter the PIN code in case the PIN protection is activated) **To Switch off** - press and hold the **RED** button (4), untill the mobile turns off.

Before Switching On of the mobile phone be sure that the battery is inserted and is charged.

## Keypad lock

Mobile phone is provided with the keypad lock which prevents from the unwanted press of the buttons (f.e.when placed at the pocket).

### For **manual keypad lock** press and hold a side button \* (8) till the keypad is locked

or press the red button **(4)** on the main screen.

#### To UNLOCK the keypad

press and hold a side button \***(8)** till the keypad is unlocked.

## Charging

Be sure that the battery is placed at the mobile phone. Connect it with the charger and charging will start automatically.

Mobile phone can be charged even if it is in switched on or in switched off mode.

Charging level is indicated on the mobile screen:

Discharged	Fully charged

After the battery is fully loaded disconnect the charger from the network and from the mobile phone !

Mobile phone will warn you by an acoustic signal and by message on the screen when the battery is almost discharged. In this case charge the battery as soon as possible.

# Making calls Dialling

Dial required phone number on the mobile keypad and press the green button **(5)**. Mobile phone will start dialling of required number.

If you have dialled by mistake a wrong number, just press the left button **(1)** and the last digit will be deleted.

If you need to delete the whole number, press and

hold the red button **(4)** untill the whole number is deleted.

### Answer / reject the call

For answering of the call press green button (5)

For rejecting of the call, press red button (4).

If somebody is calling, you will see his telephone number on the display.

If his number is stored in the contact list you will see his name on the display.

(Function of displaying of the tel.number need not be always available)

## Emergency call

If you are in danger or you need an assistance of your relatives or your doctor, press the SOS button placed on the back side of the mobile phone.

Mobile will automatically start to dial pre-set tel.numbers and will send emergency SMS to these numbers including your mobile position on the map. Attention ! First you need to activate this function in your mobile. You must insert correct tel.numbers which should be contacted in case of emergency. If you do not insert the tel.numbers the mobile / SOS button will not work properly.

## Flashlight

Mobile phone is provided with a flashlight placed on the bottom side of the mobile phone.

Flashlight can be turned on by the switch **(13)** placed on the side of the mobile phone.

Flashlight is provided with a very economical light source (LED).

Flashlight can be turned on even in case the mobile phone is switched off (with charged battery)

## Safety instructions

- Do not Switch On and do not use the mobile phone in the prohibited areas
- Do not use the mobile phone while driving the car
- Turn off the mobile phone near the sensitive medical device
- Turn it off in the aircraft

- Do not use the mobile phone near the filling petrol station
- Turn off the mobile phone always near explosives
- Use always original batteries supplied by the producer (danger of damage or explosion of the mobile phone)
- Attention! Your mobile phone is NOT waterproof !

## Used electric device

Mobile phone is an electronic



appliance. It means it must not be manipulated as a common residential waste.

## Never throw the used device away at the common municipal waste !

It must be, after the use, handed over to the appropriate collection point for its recyclation and ecological liquidation.

Breach of these instructions is not legal.

This device may contain the substances dangerous to the environment – it is necessary to handle it in a proper way to protect it.

#### **Battery liquidation**



Used/old batteries and accumulators do not belong to the common residential waste !!!

They may contain the substances dangerous to the environment. Hand over the battery to the respective collection point which provides the ecological liquidation.

Please contact your dealer to get more information how to handle the used products.

Handling with the used batteries in contradiction with given instructions is illegal!

# <€ 0700

Importer : <u>www.aligator.cz</u> Copyright © 2016 - ADART COMPUTERS s.r.o.