

# ALIGATOR

## R12 eXtremo

Durable mobile phone for 2 SIM cards



## Quick Guide

# Contents

Important instructions.....	2
Your mobile phone.....	5
Insert SIM, memory card and battery.....	6
Battery charging.....	6
Switch On / Off.....	7
Making calls.....	7
Keypad lock.....	8
Volume.....	8
Position of antennas.....	8
Insert of text .....	9
Telephone directory.....	9
Torchlight.....	10
Abbreviations.....	10
Safety and ecology.....	10
Declaration of conformity No. 7/11/2016.....	11

**We thank you for buying of this durable mobile phone ALIGATOR.** Before you start please read the quick guide containing important instructions.

## Important instructions


- Although the mobile phone is durable, treat your phone and its accessories with care, protect it from falling to the ground, mechanical damage, dirt and extreme temperatures. Especially protect the screen from bumps and knocks! Never disassemble the phone or accessory! Remember that even with a durable phone display can crash damage!

- Your phone is waterproof (not in saltwater), provided that all covers of holes are properly fitted and sealed. The maximum length of contact with water is 30 min. and the phone must not be submerged to depths greater than 1m. Yet it has to be completely protected against water. In case of contact, respectively immersion in water, remove it from the water as soon as possible and pat dry.
- When deploying all covers make sure that there is no dirt on the seal caps , they seal properly and are fully deployed.
- When the phone or its part got into contact with water, dry it thoroughly before operating it. Especially dry all caps, folds, crevices and holes for the speaker, earphone and microphone. Never open the cover on the back of the phone or at the connector after the phone came into contact with water without being properly dried out before.
- In case of contact with water, do NOT tamper with the phone, press any buttons and tamper with hole caps.
- Protect microphone, earphone and loud-speaker openings from the dust or sharp objects
- Do not switch on and do not use the mobile phone in the prohibited areas
- Do not use the mobile phone while driving the car
- Do not use the mobile phone near the filling petrol station

- Turn off the mobile phone always near explosives
- Use always original batteries supplied by the producer (danger of damage or explosion of the mobile phone)
- SAR – mobile phone meets the prescription for maximal emission of the electromagnetic radiation.
- While making a call please keep the mobile phone at least 2-3 cm away from the body to minimise the quantity of the el.magnetic radiation absorbed by your body.
- Handle your cell phone and accessories with care , protect it from mechanical damage and impurity
- Protect the mobile phone and accessories from the extremely high temperatures
- Do not put the battery at the fire and do not expose it to the temperature over +60°C (danger of explosion or fire)
- Protect the mobile phone and accessories from the fall to the ground
- Never put the mobile phone into parts !
- Turn off the mobile phone near the sensitive medical devices unless you are sure that the radio transmission of the mobile phone does not influence its functions.
- Mobile phone can affect the function of the electronic cardiac pacemaker or other implanted apparatus. Use the phone on the opposite side of the body than a pacemaker or other devices – please consult your medical doctor. In cases of suspected violation turn off the phone immediately !
- Switch off the cell phone always in the aircraft
- Do not place the mobile phone or its holder in the car at the place over the airbags

- Keep it out of reach of the children and do not allow them to play with. It contains small parts that can be suffocated or may hurt !
- Software and hardware of the mobile phone are continuously updated. The importer reserves the right to alter the instruction manual or mobile phone functions without a prior notice.
- The phone has a very powerful flashlight. Never shine the flashlight into the eyes – danger of eye damage or a dazzle.


## Your mobile phone

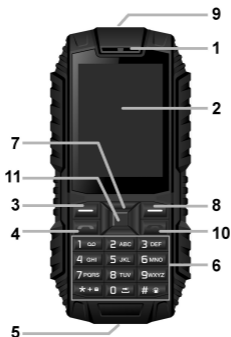

- |                                      |                                       |
|--------------------------------------|---------------------------------------|
| 1. Earphone                          | 7. Navigational button                |
| 2. Screen                            | 8. Right functional button / contacts |
| 3. Left functional button            | 9. Torchlight                         |
| 4. Button for calling                | 10. Button to finish call / Switch on |
| 5. Connector for charger and headset | 11. Button OK                         |
| 6. Numeric keypad                    |                                       |

## Insert SIM + memory cards + battery

1. Remove the battery cover on the back side of the phone
2. Insert carefully one or two SIM cards at the slots under the space for battery. Make sure that the SIM cards are placed correctly with the contacts towards down. The battery must be removed when placing of SIM cards.
3. Insert the MicroSD card (if available) at the slot

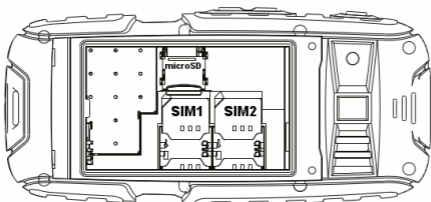

4. Insert the battery
5. Put the cover back and tighten the 2 supplied screws. Screws must be tightened but make sure not to damage the threads by an excessive force. You can use the enclosed screwdriver (optional accessories).

## Battery charging

The indicator of charging level is placed at the upper part of the screen. In case the battery is discharged proceed as follows :

1. Connect the charger with the electrical network
2. Open the cap of the connector on the bottom side of the cell phone
3. Connect the charger with the mobile phones

4. When the battery is fully charged please disconnect the charger from the mobile phone and from the electrical network
5. Close the cap of the connector very carefully and press it on its place. In case you do not press it carefully and control it the water can penetrate inside of the mobile phone !

*The mobile phone can be charged both in the switch on and in switch off mode. In case the battery is totally discharged (after a long time of non-using), it can take even tens of minutes till the indicator of charging level appears and till the mobile phone can be switched on and started to be used.*

## Switch On and Switch Off

Press and hold the button (10) to switch on, to end call or to switch off the mobile phone.

You can **end the call** or application event. you can return to the main screen by a short press of this button.

In case the lock of the cell phone is activated please insert the password. **The default password is 1122.**

It is necessary to set the actual time and date after the first switch on.

## Making calls

Enter the tel.number with the use of the keypad buttons and press the button (4). In case 2 SIM cards are inserted you will be asked to choose which one will be used for calling.

## Keypad lock

To set up the automatic keypad lock choose in menu :

## Settings > Security > Keypad lock

You can lock the keypad by press of the left functional button (3) followed by a press of the button \*.

To unlock the keypad please press first the left button (3) followed by a button \*.

Even the keypad is locked you can call the emergency 112 number.

## Volume

Volume level of the headphone can be adjusted during the call by pressing of the directional button to the left / right (7)

For handsfree activation – during the call please press the right functional button (8).

***Warning*** : *Exposing to an excessive noise can damage your hearing. Listen to the music with reasonable volume level and do not hold the device close to the ear, especially when using a loud-speaker !*

## Position of antennas

Internal antennas for transmission and reception are placed at the upper and bottom back part. Do not cover the places where the antennas are placed. While making a call please keep the mobile phone at least 2-3 cm away from the body to minimalise the quantity of the el.magnetic radiation absorbed by your body.

Covered antennas may influence the intensity of transmission and also the battery life.



## Insert of text

Keypad of the cell phone enables to enter not only the digits but also the letters/characters.

In case of inserting of the characters each button offers to write several letters. For example the button „2“ can write the letters A, B and C. A gap can be written with a button „0“.

You can insert the letter by repeated presses of a button, several times in quick succession till the correct letter on the screen displays.

For example : letter A is the first in line it means you press only once the button 2. Letter C is the third in line it means you press quickly the button 3 times.


- With the button # you can switch (when you write text) between the writing, small and capital letters and digit mode
- With the button \* you can enter the special characters


## Telephone directory

Numbers of your telephone contacts can be stored both at the SIM card memory and at the memory of the cell phone.

### Dialing numbers from the contact list

The simplest way to display the list, press the right function key "Names" (8). Now you can enter the name you're looking for. After that a list of matching contacts will jump immediately. Move the button up and down to select the contact you want to call and press the call button (4).

When viewing the list, the icon  appears by each contact in case the contact is stored in the phone's memory.

When stored on the SIM card, the icon of a card  appears.

## Torchlight

Turn On/Off a Torchlight (9) positioned on the top of the phone by pressing and holding of a button „0“.

**ATTENTION ! The flashlight is very powerful! Never point a flashlight into the eyes, there is a risk of glare or even damage to the eyes!**

## Abbreviations

Favourite functions can be assigned to one press of one of the 4 directional sides of the navigation button (7). Such a function will start after the press of one of the direction.

For example : camera will start to work after pressing of the directional button „up“ (set up from the production).

To change the settings, go to the menu :

**Setting→Telephone→Shortcuts**

## Safety and ecology

### Used electric device



Mobile phone is an electronic appliance. It means it must not be manipulated as a common residential waste! **Never throw the used electric device away at the common municipal waste!!!**

Hand over the used electric device to the respective collection point which provides the ecological liquidation. Please contact your dealer to get more information how to deal with the used products.

## Battery liquidation



**Used/old batteries and accumulators do not belong to the common residential waste !!!**

They may contain the substances dangerous to the environment.

Hand over the battery to the respective collection point which provides the ecological liquidation. Please contact your dealer to get more information how to deal with the used products.

**Handling with the used batteries in contradiction with given instructions is illegal!**

## Declaration of conformity

**No. 07/11/2016**

Issued in accordance with the prescription EU R&TTE Directive 1999/5/EC

Product:	Mobile phone for GSM network
Model:	ALIGATOR R12
Importer	ADART COMPUTERS s.r.o., Sokolovská 161, 180 00 Prague 8, CZ Reg.No. 25074547

Evaluated product is a mobile phone intended for the mobile net of GSM standard and is planned to be used and stored in standard conditions. The importer declares, that the product is for its use safe and during the production there are taken control and other measurements securing the conformity of the product with the basic requirements and technical

documentation. Relevant harmonized norms have been applied to evaluate the conformity.

The tests were carried out and the protocol made by authorised person :  
PHOENIX TESTLAB GmbH, Königswinkel 10, D-32825  
Blomberg, Germany

Product bears the European conformity mark **CE 0700** in accordance with prescriptions of the EU.

Issued in Prague, on 7.11.2016



.....  
ADART COMPUTERS s.r.o.