


ALIGATOR

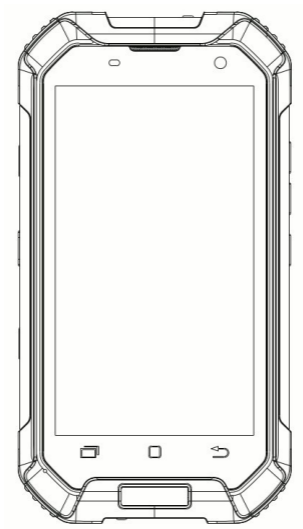

RX550 eXtremo

Quick guide

Google, Google Play and Android are trademarks of Google Inc.

Contents

Before you start.....	2
DUAL SIM function.....	3
Important instructions	3
Insert SIM cards	6
Mobile controls.	8
Switch on	8
Telephone Reset	9
Activation and screen unlock	9
Operating system Android™	9
Basic control.....	10
Making calls.....	13
SMS messages.....	15
Choice of SIM for calling, SMS + internet	15
Choice of network by connection difficulties... ..	15
Photography	16
SOS Button	17
PTT Button.....	17
PC connection.....	18
Safety and ecology	18
Declaration of conformity	20

Before you start

We thank you for buying of this resistant mobile phone ALIGATOR.

Before you start, please read this quick guide with important instructions.

DUAL SIM function

Your mobile phone can operate on 1 or 2 SIM cards. If you insert only 1 SIM card, your mobile phone works like a standard mobile phone.


If you insert 2 SIM cards, both are working on line at the same time and it is possible to make a call on either card.

Important instructions

- In spite of the fact that the mobile phone is very sturdy , handle the device with care, protect it against the fall on the ground, mechanical damage, contamination or extreme high temperatures. Protect the screen from the hits or impacts ! Never put the mobile phone into parts. Never disassemble the phone or accessory! Remember that even by a durable phone the display can crash damage !
- Your phone is water resistant (not valid for salt water), assuming that all the hole covers are properly fitted and sealed. Yet if possible, keep away from water. In case of contact, respectively immersion in water, remove it from water as soon as possible

and let it properly dry.

- When deploying all caps be always sure that the seal caps are not dirty and that the covers seal properly and are fully deployed.
- If the phone or its part gets into the contact with water, dry it thoroughly before using. Mainly dry all the folds, crevices and holes for the speaker, earphone and microphone. Never open the door (on the back of the phone) after the phone has come into contact with water and before the cover and its surroundings were properly dried.
- In case of contact with water, do not tamper with the phone, do not press any keys and do not tamper with caps openings.
- Do not switch on and do not use the mobile phone in the prohibited areas
- Do not use the mobile phone while driving the car
- Turn off the mobile phone near the sensitive medical device unless you are sure that the radio transmission of the mobile phone does not influence its functions
- Mobile phone can influence the function of the electronic cardiac pacemaker or


other implanted apparatus  please
consult your medical doctor

- Turn off the mobile phone in the aircraft
- Do not use the mobile phone near the filling petrol station, turn off the mobile phone always near explosives
- Use always original batteries supplied by the producer (danger of damage or explosion of the mobile phone)
- Do not put the battery at the fire and do not expose it to the temperature over $+60^{\circ}\text{C}$ (danger of explosion or fire)
- SAR – mobile phone meets the prescriptions for maximal emission of the electromagnetic radiation
- While making a call please keep the mobile phone at least 2,5 cm away from the body to minimalise the quantity of the el. magnetic radiation absorbed by your body
 - Do not place the mobile phone or its holder in the car at the place over the airbag
- Keep it out of reach of the children and do not allow them to play with. It contains

small parts that they can suffocate or can hurt !

- Failure to comply with these instructions may void the warranty on the device
- Software and hardware of the mobile phone are continuously updated. The importer reserves the right to alter the instruction manual or mobile phone functions without a prior notice

Insert SIM cards

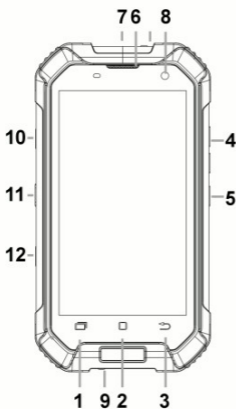

Make sure that the mobile phone is switched off. Loosen 2 screws on the back side of the mobile phone and remove the cover. Insert one or two SIM cards at the prepared positions. Pictures by the positions show in which way the SIM cards should be inserted.

The phone is equipped with 2 slots for **microSIM** cards. Next to SIM cards you can also insert a MicroSD memory card.

Finally put the battery cover back and tighten the screws. The screws must be properly tightened to ensure a watertight seal, but tighten them carefully not to cross the thread.

If the package includes a screwdriver use always the supplied screwdriver for tightening of the screws.

Overtightening, breakage or other mechanical damage of the screws are not covered by warranty !

Mobile controls

1. Button of the Launched application
2. Button „Main screen“

3. Button „Backwards“
4. Volume
5. Button „Switch On / Off „
6. Earphone
7. Earphone connector
8. Front camera
9. Micro USB connector
10. Button „Camera“
11. PTT Button
12. SOS Button

Switch on / off

To **Turn On** – press the button On/Off **(5)** and wait for a while till the mobile phone is on.

The setup wizard is displayed by the first start. Choose your language and follow the instructions on the screen.

To **Turn off** - press and hold the phone button **(5)** until the display shows the window asking to shut down. Then confirm it and the mobile phone switches off.

Mobile phone reset

In case the phone does not respond or if you need to reset it, press and hold the On/Off button **(5)** until the phone reboots.

Activation and screen unlock

The screen will be Switched Off after a certain time of inactivity. You can Switch On/Off the screen by a short press of the button **(5)**.

Generally it is necessary to unlock the screen after the activation. Put the finger on symbol „Lock“ on the screen and move it Up, left (for calling) or to the right (camera). The screen will be unlocked.

Android™ operating system

Your mobile phone is provided with the Android operating system. The mobile phone is in fact a small personal computer which can be connected to internet and in which you can install a lot of various applications free of charge (via Google Play™ store).

Basic control

Meaning of the touch buttons (1) to (3)

- 1) **Launched applications/Menu** – serves to display a list of recently opened applications. After a long press displays the menu of items available on the current screen or in a running application
- (2) **Main screen** – short press for return to the main screen, long press helps to display the Goggle search.
- (3) **Back** – serves to move back by one step/level (or to go to the preceding screen, to close the options, dialog windows on the screen etc.)

System control

Your mobile phone can be controlled by the above mentioned buttons but mainly with the use of the touch screen.

Just click on the selected item to confirm the item on the screen, to confirm the dialog windows or graphic buttons on the screen.

Main screen

Same as on your PC you have available a main screen on the mobile phone. The main screen is divided into several pages that can be displayed by moving of your finger to the left/right direction. You can place shortcuts of applications and links or widgets on the main screen.

Widgets are mini-applications that enable to display some data, control elements like watches, weather, charging controll etc.

Google account

You need to have an adjusted Google™ account for the proper use of the system. The account can be created very easily :

1. Click on the icon **Settings** on the main screen
2. Select the option **Accounts** and select
Add account
3. Further follow the instructions on the screen

Applications

In the basic equipment of the mobile phone there are applications for making calls, sending SMS, emails but also for other useful and entertaining applications.

There are thousands of various applications suitable for Android system but not all of them can work properly in your mobile phone.

Before buying of any new application please try first its gratis version if it works correctly in your mobile phone.

Information and display of status

So called „Status bar“ is placed in the upper part of the screen. You may find here the information about time, battery level and signal but also other useful information. For example the information about new SMS, information about the system or applications. Status bar can be moved down by your finger or rolled. You will get a detailed overview about all announcements and information including the possibility of a quick control of some mobile functions.

Mobile phone setup

All items of the telephone set up are clearly arranged at the settings menu. Press the button **Setup** on the home page and make desired changes.

Making calls

Dialling

Click on the earphone icon on the main screen. Screen with keypad for number dialling will be displayed. Tap the keyboard icon at the bottom part of the screen to display the keyboard. You can enter the tel.number with the use of the keypad buttons.

You can enter the tel.number with the use of the keypad buttons. Similarly as on the common telephone there are the letters displayed on the buttons so you can enter also the name. The dialled number and all corresponding items of the tel.directory will be displayed after entering of the letters on the keys of the screen.

At the bottom part of the screen you can find the calling button with a symbol of the head-phone. You can dial the number by its pressing and make your call.

Answer and reject the call

If somebody is calling you the information

about his telephone number and a button with the receiver is displayed on the screen (if available)

To **answer** the call : move the button to the right towards the symbol of a **Green** receiver

To **reject** the call : move the button to the left towards the symbol of a **Red** receiver

When working with your phone the call alert appears as a dialog box with buttons for admission ("Answer") or rejection of the call ("Close").

Call flow and finish of the call

The screen will automatically switch off when the mobile phone is attached to the ear. After the delay from the ear the screen will switch on within few seconds.

The **call can be finished** by pressing of the **Red button** on the screen.

SMS messages

1. Tap the icon at the bottom part of the main screen.
2. A list of conversations containing received

and sent SMS and MMS messages will be displayed

3. Select the icon New Message with symbol +.
4. Now you can insert the receiver of the text message.
5. To **send the text message** press the arrow button placed on the right side of the text.

Choice of SIM card for calling, SMS and internet

Click on icon **Settings/Setup** on the main screen and choose the item **SIM Cards**. You can choose which SIM card will be used for calls, SMS and internet access.

Choice of network by difficulty with connectivity

You can choose whether your phone will use a 2G network, 3G or 4G, respectively you can switch between them automatically.


If you have problems with access to calls or you can not be called despite showing sufficient signal, restart mobile phone and possibly temporarily disable the 4G network connection:


Tap on the main screen and select **Settings** icon in the **Wireless connection & networks** click **Next**.

Further select the **Mobile networks** and select preferred network type for each SIM card. Now select **GSM / WCDMA auto** (2G / 3G) or **GSM only** (2G only).

Photography

Start the camera by tapping the camera icon or press and hold the side button **(10)**. Aim the camera at the scene and tap your finger on the screen to the point that you want to focus.

After focusing the scene you can take a picture by pressing the shutter button  on the side of the display. **Attention!**

After focusing the scene you can take a picture by pressing the shutter button  on the side of the display. **Attention!** Always perform focus or wait for automatic focus and then press the shutter button otherwise the images may be blurred.

When you start the camera, you can take a shot by a short press of the side button **(10)** and make a video by a long press of the side button (10).

SOS button

You can easily run the emergency calls to preset tel.numbers by pressing the SOS button.

To set - tap the **Settings** icon on the main screen and choose **Setting SOS Button** in section **Personal**

PTT Button (Push-to-talk)

PTT button is possible to use for so-called ***Push-to-talk*** communication in connection with a suitable application, ie communication with a group of friends or colleagues simply by pressing a button, just as through radio transmitters. The communication works via Internet.

PTT function requires the installation of an additional application **Zello PTT Walkie Talkie** in your mobile phone.

More information to download see at www.zello.com or look up the application in the Google Play™ store.

PC connection

You do not need any special drivers (Vista, 7, event. newer) for connection to the common PC . Follow these steps :

1. Connect the mobile phone with PC with the enclosed data cabel
2. Drag the status bar down and click on the line „Connected as...”
3. Menu of the connection modes will be opened. We recommend to use the device mode for media MTP.
4. Subsequently, the phone will connect to a PC as a "Media device"
5. Internal storage in your phone and inserted MicroSD card will be connected to a computer in the file Computer in section Portable Devices and under the name RX550.

Connection can be cancelled by disconnecting of the cable.

Safety and ecology



Used electric device

Mobile phone is an electronic appliance. It means it must not be manipulated as a common residential waste.

Never throw the used device away at the common municipal waste !!! Hand over the electric devices to the respective collection point which provides the ecological liquidation.

Battery liquidation



Used/old batteries and accumulators do not belong to the common residential waste !!!

Hand over the battery or electric devices to the respective collection point which provides the ecological liquidation.

Please contact your dealer to get more information how to deal with the used products. Do not put the battery at the fire and do not expose it to the temperature

over +60°C (danger of explosion or fire)

Handling with the used batteries in contradiction with given instructions is illegal!

CE 0700

Declaration of conformity

No. 20/2/2017

Issued in accordance with the prescription : EU R&TTE, 1999/5/EC

Product: Mobile Phone for GSM, WCDMA a LTE network

Model: ALIGATOR RX550

Importer: ADART COMPUTERS s.r.o., Sokolovská 161,
180 00 Praha 8, Reg.No. 25074547

Evaluated product is a mobile phone intended to be used and stored in standard conditions. The importer declares that the product is for its use safe and during the production there are taken control and other measurements securing the conformity of the product with the basic requirements and technical documentation. Relevant harmonized norms have been applied to evaluate the conformity.

The tests of conformity were carried out and the protocol made by authorised person: PHOENIX TESTLAB GmbH, Königswinkel 10, 32825 Blomberg, Germany.

The product bears the European conformity mark **CE 0700** in accordance with the prescriptions of the EU.

Issued in Prague, on 20.2.2017

ADART COMPUTERS s.r.o.