

ALIGAT)R

SOS Locator



A321 – Quick Guide

Contents

Safety instructions.....	3
Putting into operation.....	4
Battery charging.....	5
Switch On / Off.....	7
Mobile controls.....	8
Making calls.....	15
Contact list.....	16
Photo contacts.....	18
SOS call and SMS.....	19
FM Radio.....	28
Setting of the phone.....	28
Security.....	29
Dual SIM setting.....	30
Safety and ecology.....	31
Used electric device.....	31
Battery liquidation.....	32

Safety instructions

- Do not switch on and use the mobile phone in the prohibited areas
- Do not use the mobile phone while driving the car
- Turn off the mobile phone near the sensitive medical device
- Turn it off in the aircraft
- Do not use the mobile phone near the filling petrol station
- Turn off the mobile phone always near explosives
- Use always original batteries supplied by the producer (danger of damage of explosion of the mobile phone)
- Attention! Your mobile phone is NOT waterproof !

Putting into operation

Insert SIM, memory cards and battery

1. Insert your nail at the slot under the battery cover on the back side of the phone and remove carefully the cover.
2. Insert 1 or 2 SIM cards (insert also memory card if you have it).
3. Insert the battery. Three metal contacts must lead to upper part of the mobile phone. Battery must smoothly fit at the battery holders in the mobile phone.
4. Finally put the battery cover back.



ATTENTION! Switch off the mobile phone and disconnect the charger by

any manipulation with the battery, memory card or SIM card. Use only original battery supplied by the mobile producer.

Battery charging

Be sure that the battery is placed at the mobile phone. Connect the charger and the charging will start automatically.

Mobile phone can be charged if it is in switched on or switched off mode. Charging level is indicated on the mobile screen.

Discharged battery	Fully charged
	

Mobile phone will warn you by an acoustic signal and by message on the screen when the battery is almost discharged. In this case charge the battery as soon as possible.

Sometimes it happens that after the battery is fully discharged phone will not start charging the battery by connecting the charger. In this case, leave the phone connected to the charger for several hours until the battery starts charging.

Attention! If you leave the battery fully discharged for a long time, it can lead to its destruction, which is not covered by warranty!

Switch On / Off



to SWITCH ON the phone - press and hold the red button, till the phone turns on. (Now you can be asked to enter the PIN code in case the PIN protection is activated).

to SWITCH OFF - press and hold the red button, until the mobile turns off.

Before Switching On be sure that the battery is inserted and is charged.

Mobile controls



Description of the Mobile controls

No.	Name	Function
1	Right functional button	-starts contacts in standby mode -return from menu or exit from current function -other functions depending on context (current function is shown on display above the key)
2	Left functional button	-displays message in standby mode -confirms selection

in menu or activates selected function (OK)
-other functions depending on context (current function is shown on display above the key)

3 **Navigation
button
Up / Down**

-press Up in standby mode to display phone menu
-press Down to display photo contacts
-move in menu and in phone list

- 4 Red button**
- long press to Switch On / Off
 - stop or reject a call
 - return from the menu or exit current function on the main screen

- 5 Green button**
- press the button to answer the call
 - displays call history in standby mode

- 6 Button 0**
- when writing tel.number enables to write „0“, when writing text enables to write „gap“
 - long press to turn

on/off silent mode
„Meeting“

7 Button #

- inserts # when writing numbers
- in text writing mode toggles method of character input

8 Button *

- inserts *, +, p, w when writing numbers
- in text writing mode enables to insert special characters

9 Keypad lock switch

-slide the switch Up to lock keypad
-slide the switch Down to unlock the keypad

**10 Connector
MicroUSB** used to connect the
charger

11 Flashlight powerful LED flashlight
is placed on top of the
phone







12 Earphone used to listen the call

**13 Flashlight
switch** press and hold the
button to turn on/off the
flashlight

**14 Stand
contacts** used for charging in a
stand

**15 Earphone
connector** Used to connect
headphones / mini-
handfree

Icons on the screen

	Battery charge level
T 	Signal strenght
	Alarm activated
	Unread SMS message
	Ringer Off - vibration
	Missed call

Making calls

Dialling

Insert required phone number on the mobile keypad and press the green button **(5)**.
Mobile will start to dial required number.

If you have 2 SIM cards in your mobile and both are activated, mobile phone will ask you which SIM card should be used for calling.

By using of the button Up/Down **(3)** choose the SIM card and confirm by button **(OK)**

If you have dialled by mistake a wrong number, just press the right button „Delete“ **(1)** and the last digit will be deleted.

If you need to delete the whole number, press the red button **(4)** and a whole number is deleted.

- **For answering of the call** press green button **(5)**.
- **For rejecting of the call**, press red button **(4)**.
- **Adjust the volume** during a call by pressing the Up / Down **(3)**.
- For **hands free** during the call, press the right button SpkrOn **(1)**.

Contact list

you can store phone numbers at the phone and assign a name to each number.

Contacts can be stored either on the SIM card or at the phone memory.

Dialling from the contact list

The simplest way to display the contact list is to press the right button **(1)**. Now you can type the first letter of the name you are looking for. After that a contact list, sorted alphabetically by name, appears.

Use the Up and Down button to select the contact you want to call and press the green button **(5)** to make a call.

When viewing the contact list, the distinguishing icon appears to show if the

contact is stored on the SIM card or at the mobile phone.

Photo contacts

This feature allows to save photos to the eight selected contacts.

After pressing the down button **(3)** on the main screen, these contacts are displayed on the screen and can be easily dialed by pressing the number that is displayed on each photo.

Setting of photo contacts:

1. Select **Contacts** → **Photo contacts**

2. Use the Up / Down button (3) to select the contact you want to set
3. Press the left button Edit (2)
4. Set the name, tel.number, picture and ringtone

SOS call and SMS

Starting the emergency call and SMS

Press and hold the SOS button. An audible alarm and a countdown begin, during which you can interrupt the running emergency call

The phone will begin automatically to dial the preset numbers from the list until it can reach any of them. The phone repeats max. 3x to dial all preset numbers.

The phone also sends an emergency SMS message with a preset text to all preset phone numbers. (For TEXT setting : select in menu **SOS setting → SOS SMS**)

After that the mobile phone remains in the so-called “Emergency Mode”.

In the emergency mode, **the phone will automatically answer incoming calls** and automatically activates the handsfree - speakerphone.

If you need to **deactivate** the SOS call and alarm, resp.emergency mode, just press the button **OFF (1)** and after that switch off and restart the mobile phone again.

SOS function is only available if it is enabled in the settings of the phone and if the numbers are set up at the phone that the mobile should automatically call and send SMS message to, see below.

SOS Locator – mobile localisation

Your phone has a special function that allows you, after pressing the SOS button, to determine the location of the phone and send it via SMS to recipients in the form of a link to view the map - if the recipient is using a regular phone with a web browser. Just "click" on this link and a map showing the position of the phone displays.

The location is determined based on the focus of the network operator, the accuracy is dependent on the density of the network at a given position, eg. in the cities the position can be determined with an accuracy of tens to a few hundred meters, outside the buildings/cities but a focus accuracy usually decreases.

This service is provided without any guarantee, at the own risk of an user and the accuracy of the results or the availability of services is not guaranteed by the supplier of telephone, operator or provider of maps. The service may be terminated at any time without notice.

Settings

The SOS function needs to be properly set.

SMS message with a position (instead of the standard emergency SMS) is always sent after the activation of the SOS button.

Select in menu :

SOS set.. → Regime → SOSLOCATOR

Deactivation of sending SMS message

It is possible to deactivate the sending of SMS messages after the activation of the SOS button. Select in menu :

1. SOS set. → Send SMS

2. Select On / Off

Remote location request

Position of your mobile phone can be remotely detected by using of a special control SMS.

It is sufficient to send just a command via SMS with a text **SOSLOCATOR** on your ALIGATOR phone. Your ALIGATOR phone then responds by sending of your current position via SMS.

IMPORTANT: Your phone sends location and responds only to SMS messages from numbers that are stored for emergency calls.

Setting of emergency SOS function

To set the SOS function select in menu :

SOS Settings

The menu is displayed :

1. **Mode** – enables to switch SOS function

Choose from following options :

- **Off** – SOS function including SOS buttons are disabled
- **Normal** – turns on SOS calls and sending of emergency messages, but function of sending of position is Off
- **SOSLOCATOR** – SOS calls including sending of position is On

2. **SOS SMS** – enables to set the text of emergency SMS

3. **Send SMS** – enable/disable to send emergency SMS after pressing of the SOS button

4. **Siren** – determines whether the siren starts after pressing of SOS button

5. **SOS numbers** – set up to 5 numbers that the phone sends the emergency SMS to and attempts to reach/call after activating of the SOS button

Call setting

Select in manu:

Calls → **Settings** → **SIM 1 / 2 call settings**

Now you have several options :

1. **Hide my number** – to set whether to show your phone number to the called party
2. **Waiting call** – to set waiting call / hold call
3. **Call forwarding** – to set call forwarding
4. **Blocking** – to set call barring
5. **Lines** – to switch lines assigned to SIM card

SMS Messages

Creating and sending of SMS messages

1. Select in menu: **Messages** or press the left functional key **SMS (2)**.
2. Select **Write**
3. Enter the text message. Press button **#(7)** to switch lowercase / uppercase letters and numbers, you can enter special symbols by using ***(8)**
4. Press the left button „Options“ **(2)** and select **Send**.
5. Now you can manually enter phone number (**Insert number**) or select it from the contact list (**Select contact**).
6. Continue to press the left button „Options“ **(2)** and select **Send**.

FM Radio

Your mobile phone is equipped with FM Radio . Select in menu: **Multimedia** →

Radio:

1. Adjust volume by pressing * (8) / # (7)
2. Frequency can be changed by using of the numeric button 4 and 6 (automatic search) or 2 and 8 (manually).
3. Turn On/Off the sound by repeated presses of button with the number 5

Setting of the phone

Select in menu: **Settings** → **Phone**

It allows to set basic parameters:

1. **Time and date** – to set time / date / time zone

2. **Language** – setting of language menu
3. **Writing language** – to set the preferred language for text writing on the keypad
4. **View** – wallpapers and data setting on the mainscreen
5. **Auto.time** – allows to enable automatic time adjustment from the operator network
6. **Flight mode** – turns off all transmitters in your phone
7. **Other settings** – adjust brightness and time delay of screen lighting

Security

Select in menu: **Settings** → **Security**

Allows you to set a PIN code for the SIM card and phone password:

1. **SIM1/2** – On/Off and change of PIN code
2. **Phone** – On/Off and change of phone lock with a password. Default password from factory : **1122**

Dual SIM Setting

Allows you to choose to operate with both or just one of the inserted SIM cards.

Select in menu: **Settings** → **Setting SIM**

Connections

Select in menu: **Settings** → **Connection**

Enables to set Bluetooth, data accounts etc.

Restore settings

Select in menu: **Settings** → **Restore settings**

It allows to reset your phone. Requires a phone password. By default the factory-set password is **1122**.

Safety and ecology

Used electric device



Mobile phone is an electronic appliance. It means it must not be manipulated as a common residential waste. **Never throw the used device**

away at the common municipal waste!!!

It must be, after the use, handed over to the appropriate collection point for its recycling and ecological liquidation. Breach of these instructions is not legal. This device may contain the substances dangerous to the environment – it is necessary to handle it in a proper way to protect it. Please contact your dealer to get more information how to handle the used product.

Battery liquidation



Used/old batteries and accumulators do not belong to the common residential waste !!! They may contain

the substances dangerous to the environment. Hand over the battery to the respective collection point which provides the ecological liquidation. Please contact your dealer to get more information how to handle the used product.

Handling with the used batteries in contradiction with given instructions is illegal!

CE 0700

Importer: www.aligator.cz

Copyright © 2017 ADART COMPUTERS s.r.o.