

ALIGATOR

SOS Locator



Quick Guide A510

Contents

Safety instructions.....	3
Putting into operation.....	6
Insert SIM, memory card, battery.....	6
Battery charging.....	7
Switch On / Off.....	8
Automatic time setting.....	9
Mobile controls.....	10
Making calls.....	17
Contact list.....	18
Photo contacts.....	19
SOS call and SMS.....	19
SOS Locator	21
FM Radio.....	26
Bluetooth.....	26
Mobile phone setting.....	27
PC connection.....	28
Safety and ecology.....	29
Used electric device.....	29
Battery liquidation.....	29
Declaration of conformity.....	30

Safety instructions

Thank you for your purchase of the ALIGATOR mobile phone. Please read this instruction manual before use:

- Do not switch on nor use the mobile phone in the prohibited areas
- Do not use the mobile phone while driving the car
- Do not use the mobile phone near the medical appliances without having the confirmation that the radio waves do not influence its function
- Mobile phone can influence the function of the cardiac pacemakers or other implanted appliances – please consult your medical doctor
- Turn it off in the aircraft
- Do not use the mobile phone near the filling petrol station
- Turn off the mobile phone always near explosives

- Use always original batteries supplied by the producer (danger of damage or explosion of the mobile phone). Do not throw the battery in the fire nor expose it to the temperatures over $+60^{\circ}\text{C}$. Danger of explosion or fire !
- SAR – mobile phone meets all prescriptions for maximal emission of electromagnetic radiation.
- Please keep the mobile phone 2.5 cm away from the body while calling. You lower by that the quantity of electromagnetic radiation absorbed by your body.
- Handle the mobile phone with care, protect it from falling on the ground, from mechanical damage, impurity or high temperatures. Never pick it to pieces !

- Do not place the mobile phone or its holder in the area above the airbag in the car
- Keep it out of reach of children. It contains small parts that could be swallowed or may hurt
- Sometimes, the top of the external display, including battery and signal icons, may not appear. In this case, turn the phone off and on to display it correctly.
- Software and hardware of the mobile phone are continuously innovated. The importer reserves the right to alter the instruction manual or particular functions of the mobile phone without a prior notice

Putting into operation

Insert SIM, memory card and battery

1. Slip your nail at the slot under the battery cover on the back side of the mobile phone and pull down carefully the cover.



2. Insert a SIM card at the prepared slots. Insert SIM and also MicroSD memory card (if you have)

3. Insert the battery. The three metal contacts must point toward the bottom part of the phone. Make sure that the battery clicks smoothly into the slot at the mobile phone.

4. Put the battery cover back



ATTENTION! Turn off the phone and disconnect the charger when handling the battery, card or SIM card. Only use

original batteries supplied by the phone producer !

Battery charging

Be sure that the battery is placed at the mobile phone. Connect the charger with the Micro USB connector or place the phone at the charging stand and the charging will start automatically.

Mobile phone can be charged if it is in switched on / off mode. Charging level is indicated on the mobile screen.

Battery discharged	Fully charged
	

Mobile phone will warn you by an acoustic signal and by message on the screen when the battery is almost discharged. In this case charge the battery as soon as possible.

Switch On / Off



to SWITCH ON the phone - press and hold the red button, till the phone turns on. (Now you can be asked to enter the PIN code in case the PIN protection is activated).

to SWITCH OFF - press and hold the red button, until the mobile turns off. It is necessary to confirm the shutdown by pressing the left button **Yes (2)**.

Before Switching On be sure that the battery is inserted and is charged.

Automatic time setting

you will be prompted to confirm the time when the phone is switched on for the first time. Phone time is automatically set when the mobile network supports it. If the time is correct, press the left button Save (2). Otherwise you can set the time manually.

To turn on/off the automatic time setting select in the menu:

**Setting → Phone → Time+Date →
Autom. Set → On/Off**

Mobile controls



No Button**Function****1 Right functional button**

-starts contacts in standby mode
-return from menu or exit current function
-other functions depending on context (current function is shown on display above the key)

2 Left functional button

-displays Message in standby mode
-confirms selection in menu or activates selected function (OK)
- other functions dep.on context (current function is shown on display above the key)

3 **Navigation
button Up /
Down**

-press Up in standby mode to display phone menu , press Down to display photo contacts
-move in menu and in phone directory

4 **Red
button**

-long press to Switch On / Off
-stop or reject the call
-return from the menu or exit current function on the main screen

5 **Green
button**

-press the button to answer the call
-displays call history in standby mode

6 **Button 0**

when writing tel.number enables to write „0“,
when writing text enables to write „gap“

long press to turn on/off the torchlight

7 Button #

- inserts # when writing numbers
- in text writing mode toggles method of character input
- long press to activate/deactivate a silent mode

8 Button *

- inserts *,+, p, w when writing numbers
- in text writing mode enables to insert special characters

9 Contacts

Keep clean the contacts of the charging stand

10 Connector Micro USB Enables to connect the charger or PC

11 Flashlight Powerful LED flashlight is placed on the upper side of the phone. Long press button 0 to turn on/off

2 Earphone For call listening

13 Earphone connector Used for headphones connecting /mini-handsfree

14 Volume +/- -to control a ringtone volume, music playback, or FM radio.
-during a call, adjust the volume of the call in the earpiece (or loudspeaker)

 





15 **Camera shutter**

- press to turn the camera on
- in camera mode, it acts as a trigger
- in music or recorder mode, etc., press briefly to start / stop playback.

16 **Buttons M1, M2**

- serve as a quick option to store your favorite phone numbers. The stored numbers can be then quickly dialed by simply pressing the M1 or M2 button.
- in some menu you can move to the sides
- in music or recorder mode, you can go to the previous (M1) or next (M2) track

Icons on the screen

	Battery charge level
	Signal strength
	Alarm clock on
	Unread SMS
	Missed call
	Ringing off

Making calls

Dialing

Insert required phone number on the mobile keypad and press the green button **(5)**. Mobile will start to dial required number. **If you have dialled by mistake a wrong number**, just press the right button „Delete“ **(1)** and the last digit will be deleted. If you need to delete the whole number, press the red button **(4)** and a whole number is deleted.

- **Press GREEN button (5)** to answer the call
- **Press RED button (4)** to reject the call
- **Volume** – adjust the volume while talking by the button **(14)**
- **Press the right button On/Off (1)** while talking to activate the Handsfree function

Contact list

You can save phone numbers and assign names to your numbers. Contacts can be stored either on the SIM card or at the phone memory.

Dialing from the contact list

Press the right button **(1)**. You can now enter the first letter of the name you are looking for. After that, the list of contacts, sorted by name in alphabetical order, starts immediately.

Use the up and down buttons to select the contact you want to call and press the green call **key (5)**.

When viewing the list, a distinctive icon appears on each contact if it is stored on a SIM card or at the phone memory.

Photo contacts

The phone allows you to store up to 8 so-called photo contacts - the contacts to which the photo or picture is assigned. You can then dial them quickly and easily by pressing the number next to the image. The picture is also displayed when you receive a call.

Press the Down button (3) on the main screen to display the photo contacts.

Select in menu : Photo contacts (select one) – Adjust (input name, number and photo) – Options - Save

to **call the photo contact** - Press button Down (3) on the main screen and press the button with the number(photo) that you wish to call

SOS call and SMS

Press and hold the SOS button on the back side of the phone. An audible alarm

sounds. Now you have about 5 sec. for interruption of the SOS call. After that the phone will automatically dial the preset numbers from the list until they can reach one of them. The phone repeats calls to all numbers for a maximum of 3 times. The phone also sends an emergency SMS message to the preset numbers with the preset text (to select text in the menu **Setting → SOS Set. → SOS SMS → SMS text**).

If the phone fails to call any number, it remains in the emergency mode. At this emergency mode the phone will automatically answer incoming calls and automatically **activates the handsfree feature - loud listening**. The display will show SOS.

Important!

To deactivate SOS, you need to turn the phone off and on again !

SOS function is only available if it is enabled in the settings of the phone and if the numbers are set up at the phone that the mobile should automatically call and send SMS message to.

To set up select in menu : **Setting → SOS Set.**

Deactivation of sending SMS

It is possible to deactivate the sending of SMS messages after the activation of the SOS button. Select in menu :

- **Setting → SOS set. → SOS SMS → Send SMS**
- **Select On / Off**

SOS Locator – Phone localisation

Your phone has a special function that allows you, after pressing the SOS button, to determine the location of the phone and send it via SMS to recipients in the form of a link to view the map - if the recipient is

using a regular phone with a web browser, just "click" on this link and a map showing the position of the phone displays.

The location is determined based on the focus of the network operator, the accuracy is dependent on the density of the network at a given position, eg. in the cities the position can be determined with an accuracy of tens to a few hundred meters, outside the buildings/cities but a focus accuracy usually decreases.

This service is provided without any guarantee, at the own risk of an user and the accuracy of the results or the availability of services is not guaranteed by the supplier of telephone, operator or provider of maps. The service may be terminated at any time without notice.

Setting of function **SOS Locator**

For the proper service, you need to turn it on in the settings. A SMS with a position is then sent each time the SOS button is activated instead of the standard emergency SMS message. Select in menu : **Setting → SOS Set. → SOS regime → SOS Locator**

Remote location request

Position of your mobile phone can be remotely detected by using of a special control SMS.

It is sufficient to send just a command via SMS with a text **SOSLOCATOR** to your ALIGATOR mobile phone. Your ALIGATOR phone then responds by sending of the current position via SMS.

***Important:** Your phone sends a location and responds only to SMS messages on numbers that are stored at the phone for emergency calls.*


Setting of SMS emergency functions

To set up the SOS locator function –
Select in menu : **Setting → SOS set**

- 1. SOS Regime** – allows to switch SOS functions. You can choose following options:
Off. – SOS function, including SOS button, are Off / **Normal** - SOS calls and sending of emergency SMS are activated, but positioning feature is turned off. / **SOS Locator** – SOS call incl. sending of position in On
- 2. SOS SMS** – allows you to enable / disable the sending of emergency SMS messages by pressing the SOS button and set the text of an emergency SMS
- 3. Siren** – determines whether siren is triggered after the SOS button is pressed

- 4. SOS numbers** – sets up to five numbers to which the phone sends an emergency SMS and tries to call all of them when the SOS button is activated

SMS messages

Your phone can receive and send SMS text messages. The new message you receive will be notified by a symbol  on the phone screen. A notification will appear on the screen if you have a new unread message. To view the message directly, just press the left button **(2)** and the message is displayed. Press the right button **(1)** if you wish to read the message later on. You can read the message later :

Messages → Received

An unread message is marked with an icon of a *closed envelope*, the read

message is marked with an *open envelope* symbol.

FM Radio

Select in menu: **Multimedia** → **FM Radio**

Keypad lock

The keypad can be locked / unlocked by long pressing the * **(8)** key. To set up, select: Settings → Phone → Keylock

Bluetooth connection

Bluetooth is a modern system that allows you to wirelessly connect different devices, such as a wireless hands-free phone, a phone and a computer, or two phones with each other.

It is possible to transfer call sound or send files or receive files from another device.

Select in menu: **Setting** → **Connection**
→ **Bluetooth**

Camera

The camera lens is located on the back of the phone cover.

Press the shutter button **(15)** to turn on, and the camera turns on after a while.

When you activate the camera, you can shoot images by pressing the **shutter button (15)**.

Press the left "Options" button **(2)** to display the camera menu. To **exit** the camera, press the red button **(4)**

Mobile phone setting

Select in menu: **Setting**→**Telephone**

Set: Time+Date, Language, Speed Dial, M1/M2, Insert text, Keypad lock, Wallpaper, LCD backlight..)

Restore settings

Select in menu: **Settings** → **Restore settings**. Allows you to restore the phone to its factory settings. It requires a password. By default, the password set at the factory: **1234**

PC connection

The phone comes with a standard micro USB connector that can be used for both charging and connecting to a PC.

ATTENTION! Requires the use of Windows 2000, XP, Vista, 7, 8, 10 and up! If you use other operating systems, you may need to use special drivers.

Safety and ecology

Used electric device



Mobile phone is an electronic appliance. It means it must not be manipulated as a common residential waste. **Never throw**

the used device away at the common municipal waste!!! They may contain the substances dangerous to the environment. Hand over the battery to the respective collection point which provides the ecological liquidation or contact your dealer.

Battery liquidation



Used/old batteries and accumulators do not belong to the common residential

waste !!!

They may contain the substances dangerous to the environment. Hand over

the battery to the respective collection point which provides the ecological liquidation. Please contact your dealer to get more information how to deal with the used products.

Handling with the used batteries in contradiction with given instructions is illegal!

Do not throw the battery in the fire nor expose it to the temperatures over +60°C. Danger of explosion or fire.

Declaration of conformity

ADART COMPUTERS s.r.o. declares that the type of ALIGATOR A510 radio device is in compliance with Directive 2014/53 / EU.



www.aligator.cz

Copyright © 2018