

SOS LOCATOR ALIGAT()R



A420 - We begin



Contents

Contents	3
Mobile controls	4
Putting into operation	6
Switch on / off	8
Charging	10
Emergency call	12
Making calls	15
Flashlight	18
Keyboard lock	20
Safety instructions	22
Used electric device	24

Battery	liquidation	23
---------	-------------	----

Mobile controls


1	Right functional button
2	Left functional button
3	Navigation button
	up / down
4	Red button
5	Green button
6	Button 0
7	Button #
8	Button *

9	Micro USB connector
1	Connector DCjack 2mm
0	
1	Flashlight
1	
1	Earphone
2	
1	Flashlight switch
3	


Putting into operation

Insert of battery and SIM card:

 Remove the battery cover on the back side of the mobile phone and insert a memory and SIM card (see picture)

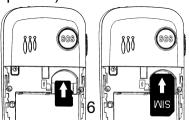

  Insert the battery (see picture). Three metal contacts must lead towards the bottom side of the mobile phone.



3. 3. Put the battery cover back. Your mobile phone is now ready to use.

Switch on / off



To Switch on - press and hold the **RED** button (4) till the mobile turns on.

(Now you can be asked to enter the PIN code in case the PIN protection is activated)

To Switch off - press and hold the **RED** button (4), untill the mobile turns off.

Before Switching On of the mobile phone be sure that the battery is inserted and is charged.

Charging

Be sure that the battery is placed at the mobile phone. Connect it with the charger and charging will start automatically.

Mobile phone can be charged even if it is in switched on or in switched off mode.

Charging level is indicated on the mobile screen:

Discharged	Fully charged

After the battery is fully loaded disconnect the charger from the network and from the mobile phone!

Mobile phone will warn you by an acoustic signal and by message on the screen when the battery is almost discharged. In this case charge the battery as soon as possible.

Emergency call

If you are in danger or you need an assistance of your

relatives or your doctor, press and hold the SOS button placed on the back side of the mobile phone.

Mobile will automatically start to dial pre-set tel.numbers and will send emergency SMSs to these numbers including your mobile position on the map.

Attention! First you need to activate this function in your mobile. You must insert correct tel.numbers which should be contacted in case of emergency.

If you do not insert the tel.numbers the mobile / SOS button will not work properly.

Making calls

Dialling

Insert required phone number on the mobile keyboard and press the green button (5). Mobile phone will start dialling of required number.

If you have dialled by mistake a wrong number, just press

the left button (1) and the last digit will be deleted.

If you need to delete the whole number, press and hold the red button **(4)** untill the whole number is deleted.

Answer / reject the call

For answering of the call press the green button (5)

For rejecting of the call, press the red button (4).

If somebody is calling, you will see his telephone number on the display.

If his number is stored in the contact list you will see his name on the display.

(Function of displaying of the tel.number need not be always available)

Flashlight

Mobile phone is provided with a flashlight placed on the upper side of the mobile phone.

Flashlight can be turned on by the switch **(13)** placed on the side of the mobile phone. Flashlight is provided with a very economical light source (LED).

Flashlight can be turned on even in case the mobile phone is switched off (with charged battery)

Keyboard lock

Mobile phone is provided with the keyboard lock which prevents from the unwanted press of the buttons (f.e.when placed at the pocket).

Press the left button (2) and immediatelly *(8) to LOCK the keyboard.

The keyboard will close itsself after a certain time of inactivity.

Press the left button (2) and immediatelly *(8) to UNLOCK the keyboard.

Safety instructions

- Do not Switch On and do not use the mobile phone in the prohibited areas
- Do not use the mobile phone while driving the car
- Turn off the mobile phone near the sensitive medical device
- Turn it off in the aircraft

- Do not use the mobile phone near the filling petrol station
- Turn off the mobile phone always near explosives
- Use always original batteries supplied by the producer (danger of damage of explosion of the mobile phone)
- Attention! Your mobile phone is NOT waterproof!

Used electric device



Mobile phone is an electronic appliance. It means it must not be manipulated as a common residential waste

Never throw the used device away at the common municipal waste!!!

It must be, after the use, handed over to the appropriate collection point for its recyclation and ecological liquidation. Breach of these instructions is not legal. This device may contain the substances dangerous to the environment – it is necessary to handle it in a proper way to protect it.

Please contact your dealer to get more information how to handle the used product.

Battery liquidation



Used/old batteries and accumulators do not belong to the common residential waste !!!

They may contain the substances dangerous to the environment. Hand

over the battery to the respective collection point which provides the ecological liquidation. Please contact your dealer to get more information how to handle the used product.

Handling with the used batteries in contradiction with given instructions is illegal!

(€ 0700

Importer: <u>www.aligator.cz</u>

 $\label{eq:computers} \textbf{Copyright} @ \textbf{2012} \ \textbf{ADART} \ \textbf{COMPUTERS} \ \textbf{s.r.o.}$